


GYA573

6-Axis Flight Control

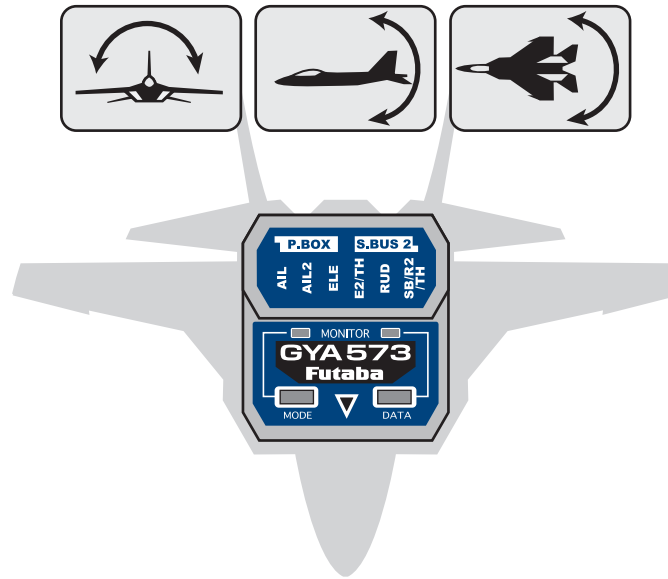

Software Update Functions

When using CIU-2/3 : Required for update

GYRO UPDATE (Update mode of GYA573)

This menu is used to adjust the update mode of the GYA573. The mode selected will be determined by the model of the CIU selected and personal preference. For example, when using the CIU-3, the user may select either the high speed or the slow speed modes. If using the CIU-2, only the slow speed mode is available.

* The following optional products are required for the update.

- CIU-2 or CIU-3
- DSC cable for update
- Receiver battery


(1) Download GYA573 update file

Download the GYA573 update file from our website or your local distributor's website.

Connection diagram

To the open/available slot of GYA573

A PC that can connect to the Internet and has CIU-2 or CIU-3 driver software installed.

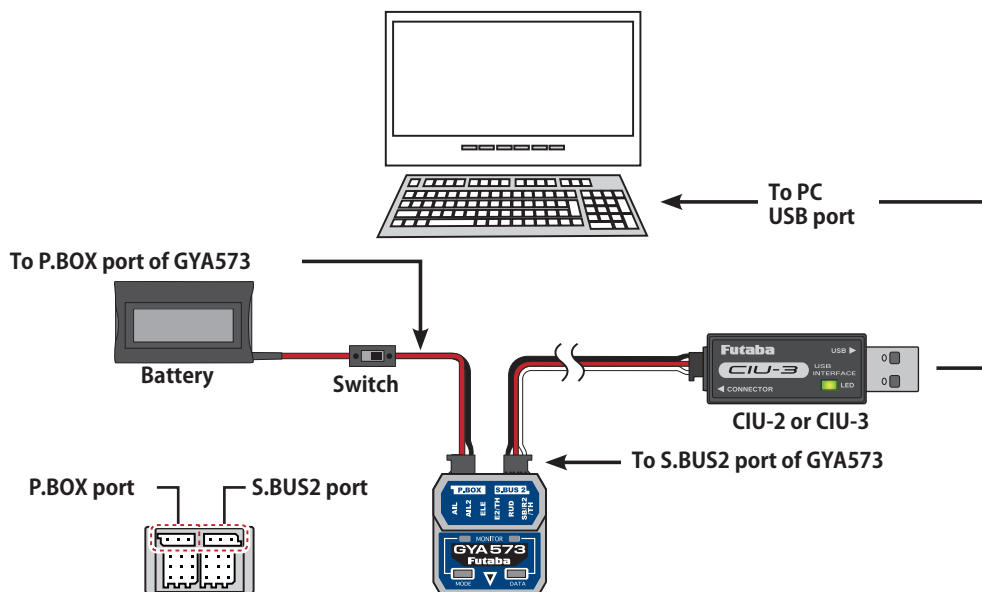



(2) Preparation for update -1

Connect the GYA573, GPB-1, CIU-2 or CIU-3 to the PC with reference to the above connection diagram.



PC side

PC
Start an executable file by a PC.

Use **CIU-2**  Updater(Lowspeed).exe


Use **CIU-3**  Updater(Highspeed).exe

Double-click

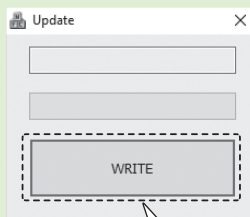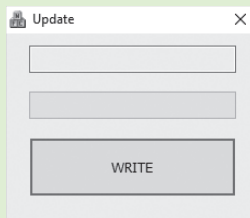

Click [WRITE]

WRITE

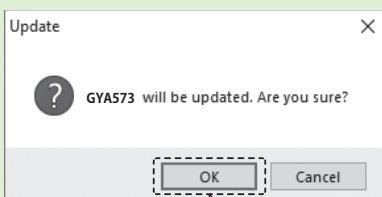


Click [OK]

OK

GYA573 side

Turn on the power of GYA573 while pressing MODE SW

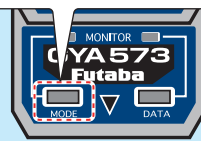

Mode LED lights **Red**

Press and hold MODE SW for about 4 seconds.

Mode LED lights **Violet**
Data LED lights **Red**



When using CIU-2, release MODE SW. To use CIU-3, press and hold MODE SW.

Mode LED lights **Violet**
Data LED lights **Green**



Release the MODE SW.

(3) Selection of CIU (Speed)

Before turning on the power of GYA573, select the writing speed suitable for CIU-2 or CIU-3 to be used for updating.

[Selection method]

CIU-2

Turn on the power while pressing the MODE SW of GYA573. The Mode LED lights **Red** at first, then about 4 seconds later, Lights **Violet**, and when the Data LED turns **Red**, release the MODE SW.

CIU-3

Turn on the power while pressing the MODE SW of GYA573. The Mode LED lights **Red** at first, then Lights **Violet** after about 4 seconds; press and hold MODE SW for another 4 seconds when the Data LED turns **Red**, and release MODE SW when the Data LED turns **Green**.

[LED display after setting]

CIU	Mode LED	Data LED
CIU-2 Low speed	Lights Violet	Lights Red
CIU-3 High speed		Lights Green


(4) Perform update

Click on the update file downloaded to the PC to update the GYA573.


⚠ CAUTION

⊘ Do not turn off the power or remove the battery while updating. GYA573 may be damaged.

PC side

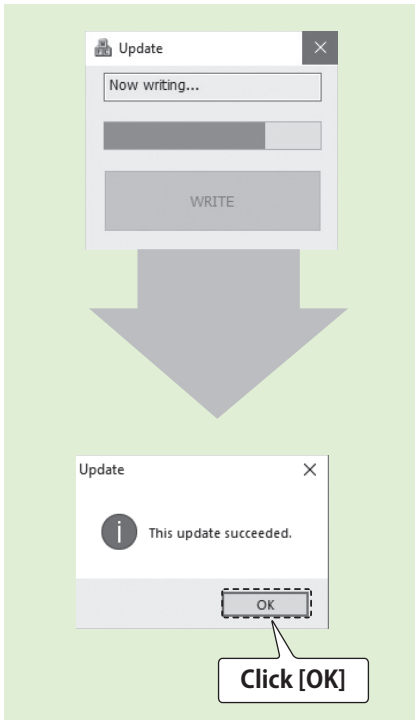

GYA573 side

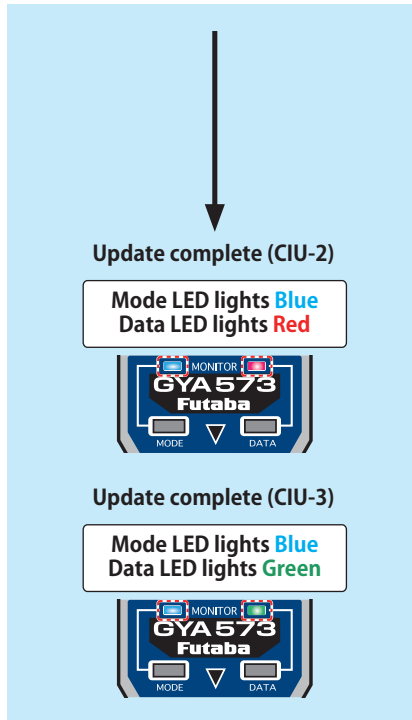


(5) Update complete

When the update is completed successfully, Mode LED will turn blue.


[LED display when update is completed]

CIU	Mode LED	Data LED
CIU-2 Low speed	Lights Blue	Lights Red
CIU-3 High speed		Lights Green

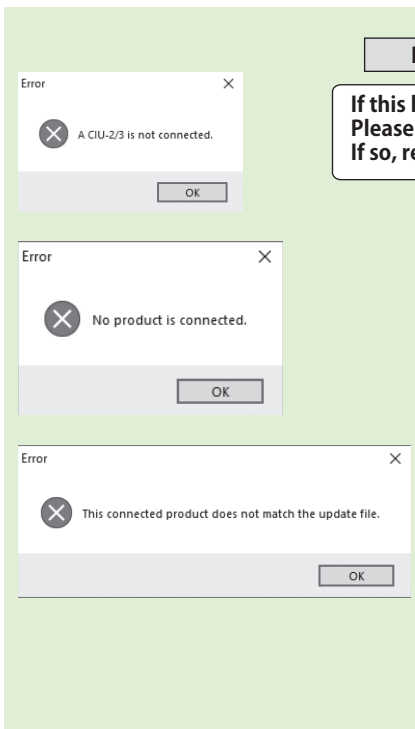

Error

If this happens, it will be up from the beginning. Please try the update again. A place to fail again If so, re-download the update file please.

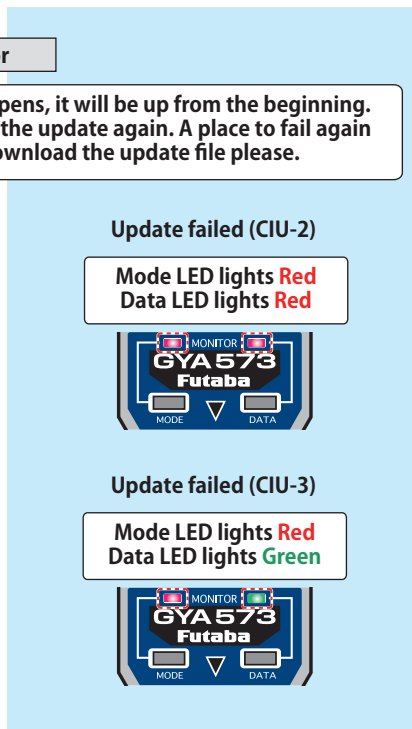


[LED display when update fails]

CIU	Mode LED	Data LED
CIU-2 Low speed	Lights Red	Lights Red
CIU-3 High speed		Lights Green


If the cable disconnects or a contact failure occurs during the update, the update stops halfway. In that case, please try updating again from the beginning.

When using T26SZ/T16IZS: Required for update

Required for update (Purchase separately)

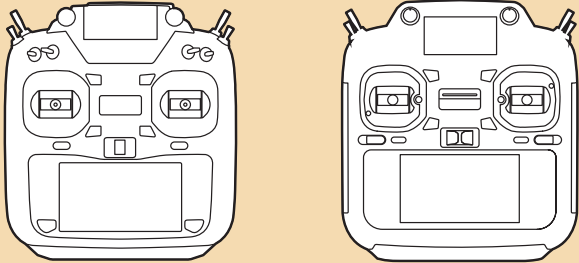

T16IZ SUPER V11.0~ T26SZ V6.0~

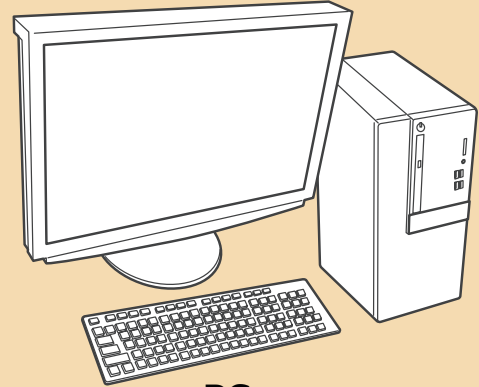

PC
(Access is possible by the web)



CGY750/GY701/GY520
Extensions




microSD card

Updating procedure

1. Download the zip file of the update data from our website or your local distributor's website.


<http://www.rc.futaba.co.jp>

<https://futabausa.com>

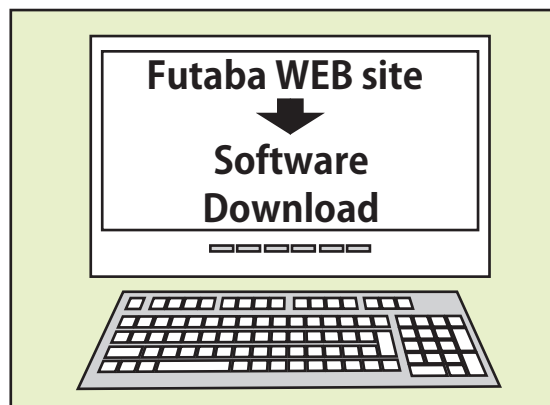


2. Extract the zip file on your computer.
3. "FUTABA" folder will be created.
4. Copy the "FUTABA" folder to micro SD card.
5. Insert the microSD card with the update file copied into the transmitter.

6. Connect as shown in the figure.

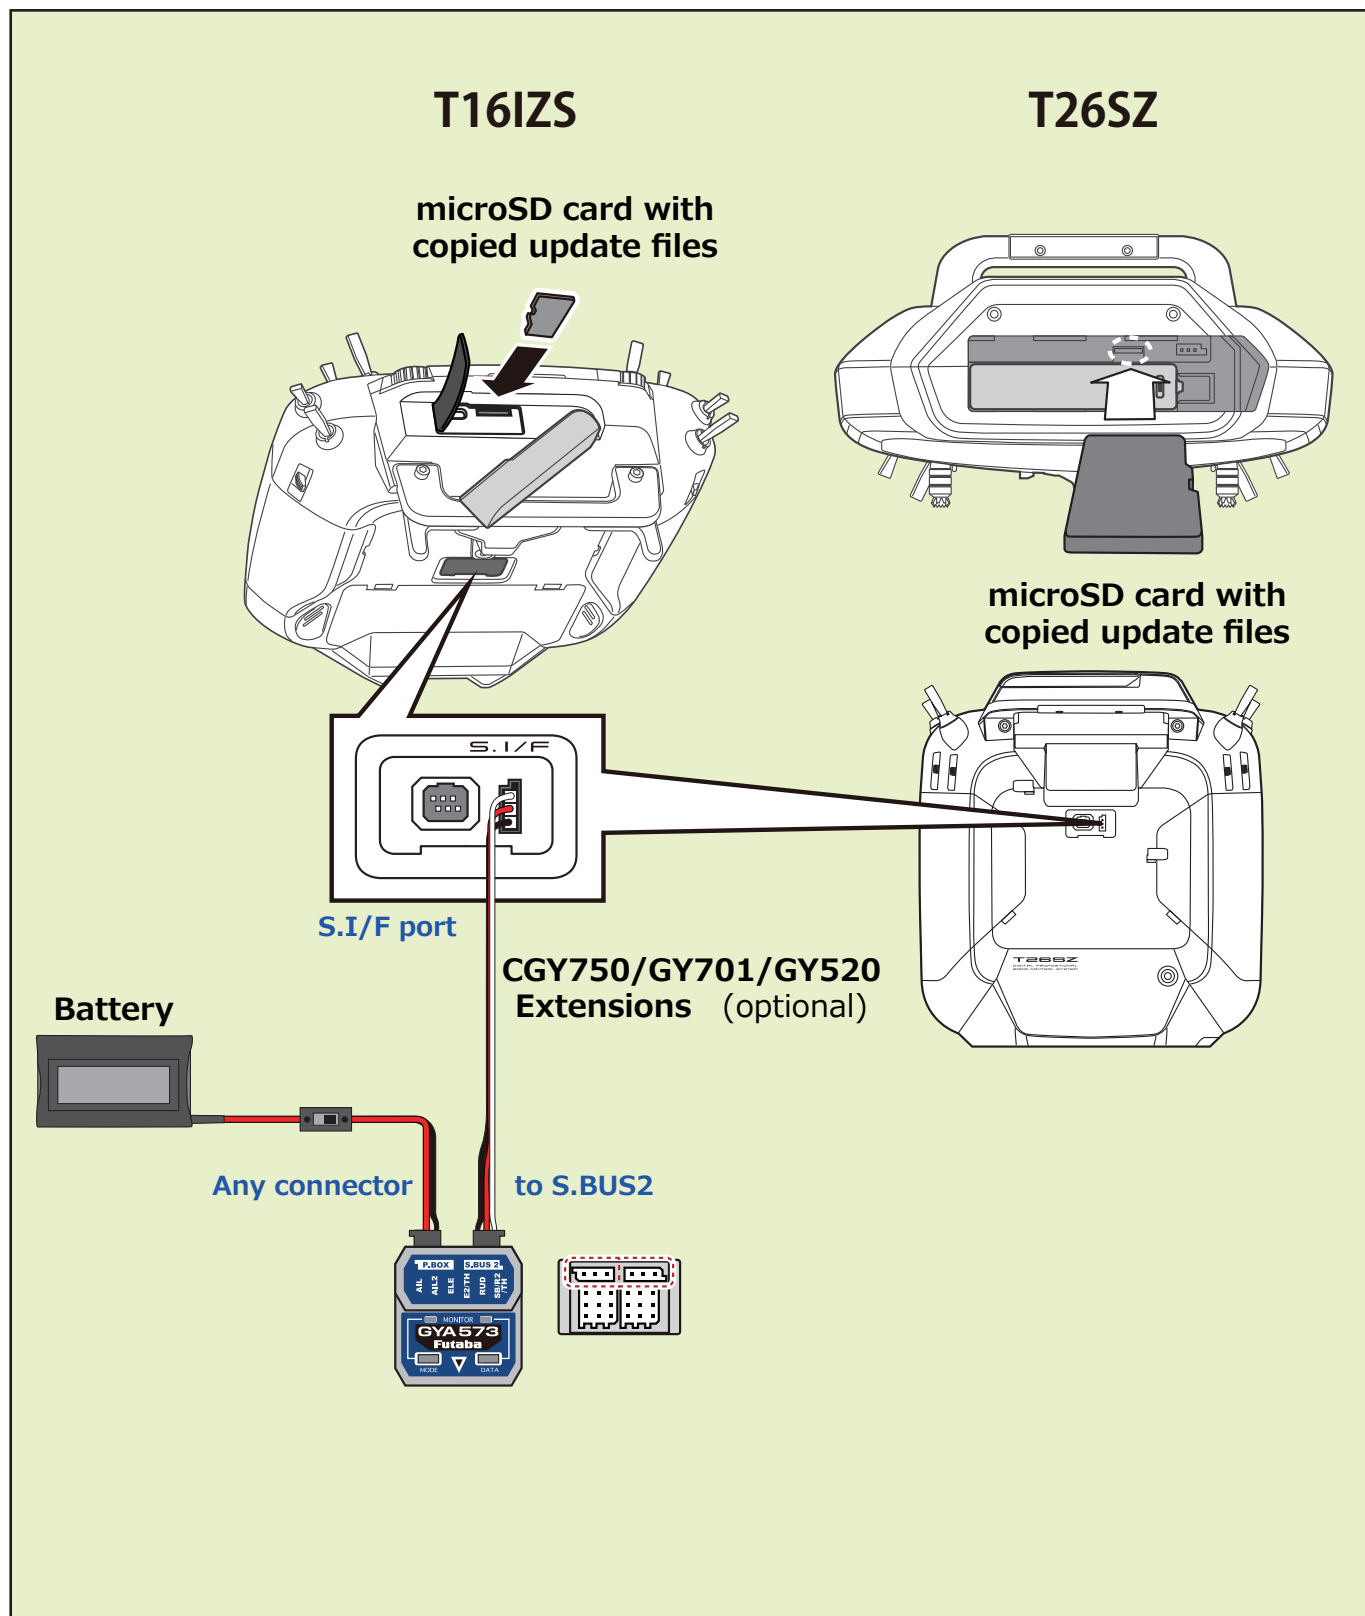

7. Transmitter menu : [System menu] ⇒ [Update] ⇒ [Gyro update] ⇒ [GYA573]


*Update is not possible when CRSF is ON.

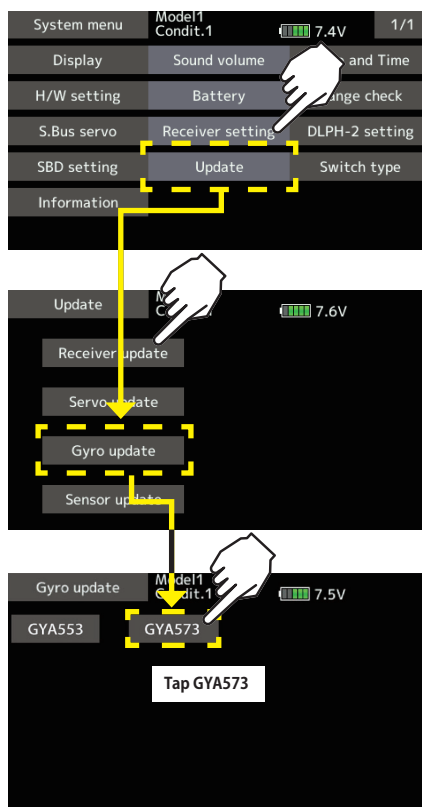

*Screen display varies depending on the model.

8. Turn on the power of GYA573 while pressing MODE SW.


9. Put the GYA573 into update mode as shown.

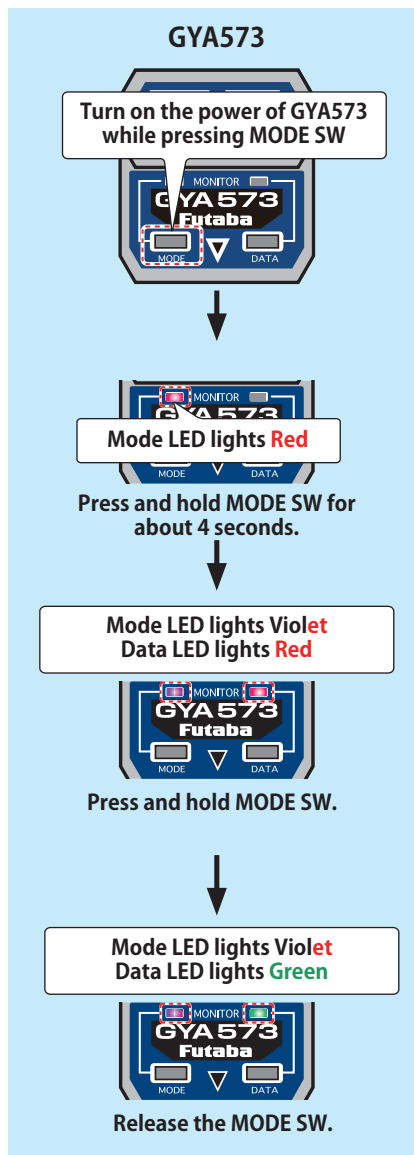

10. Tap [Update] on the transmitter.





11. Update start.

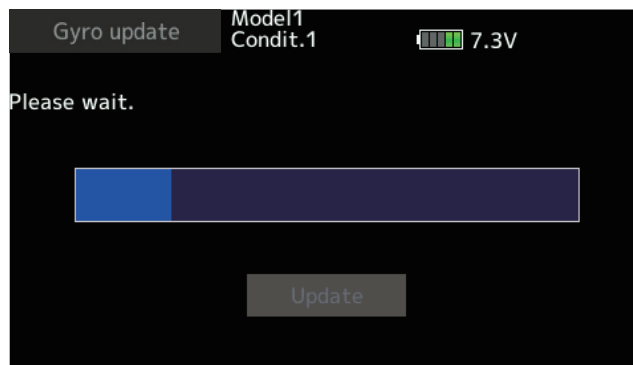

⚠ CAUTION
⊘ Do not turn off the power or remove the battery while updating. GYA573 may be damaged.

12. When the update is completed, the following display will appear.

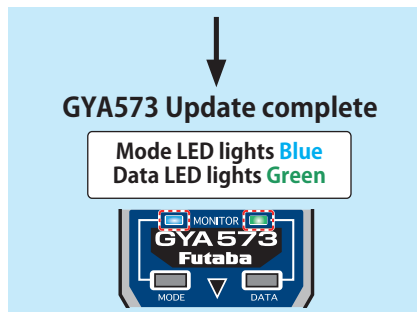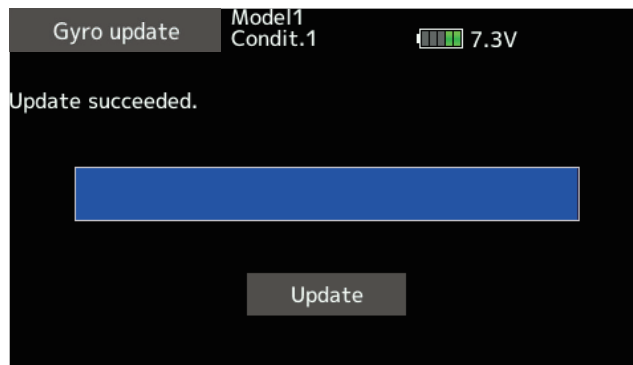

Error

If this happens, it will be up from the beginning. Please try the update again. A place to fail again If so, re-download the update file please.

Update failed

Mode LED lights Red
Data LED lights Green



If the cable disconnects or a contact failure occurs during the update, the update stops halfway. In that case, please try updating again from the beginning.

Ver 7.0

Added gyro function (RUD4) for the gear (steering).

Ver 6.0

Added Vector Nozzle function for jet models.

Camber mixing setting rate has been expanded from ± 100 to ± 200 .

Ver 5.2

Fixed the operation when auto recovery mode is turned ON in ON/OFF CH of the roll flat function.